

RS232 Commands

Command		1	3	4	5	6	7	8	9	Note
Power	OFF	S	0	0	0	1	1	0	E N	
	ON							1		
Input Source	VGA	S	0	0	0	2	1	0	E N	
	HDMI 1							1		
	HDMI 2							2		
	HDMI 3							3		
	USB 1							4		
	USB 2							5		
Brightness	0%	S	0	0	0	3	2	00	E N	
	100%							64		
	Plus							65		
	Minus							66		
Contrast	0%	S	0	0	0	4	2	00	E N	
	100%							64		
	Plus							65		
	Minus							66		
Clock	0%	S	0	0	0	5	2	00	E N	
	100%							64		
Phase	0%	S	0	0	0	6	2	00	E N	
	100%							64		
Sharpness	0	S	0	0	0	7	2	00	E N	
	100%							64		
Horizontal Position	Minus	S	0	0	0	8	1	0	E N	
	Plus							1		
Vertical Position	Minus	S	0	0	0	9	1	0	E N	
	Plus							1		
OSD Time	5secs	S	0	0	0	C	1	0	E N	5secs, 10secs, 15secs, Never
	Never							3		

Zoom(Aspect Ratio)		S	0	0	1	4	0		E N	
Touch	OFF	S	0	0	1	6	1	0	E N	
	ON							1		
Freeze	OFF	S	0	0	1	7	0		E N	
	ON									
Auto Color		S	0	0	2	0	0		E N	
Auto Processing		S	0	0	2	1	0		E N	
Auto Ambient Light	OFF	S	0	0	2	2	1	00	E N	
	ON							01		
Auto Notification	OFF	S	0	0	2	3	1	00	E N	
	ON							01		
Serial Exclusive	OFF	S	0	0	3	0	1	0	E N	
	ON							1		
On Screen Menu		S	0	0	3	1	0		E N	
Monitor ID		S	0	0	F	F	1	0	E N	
								F		
Ping		S	1	0	5	0	0		E N	Note *
Query		S	1	0	5	1	2	00	E N	Note *, Note **
								FF		
Reset		S	0	0	F	0	0		E N	
Factory Mode		S	0	0	F	1	0		E N	
Engineer		S	0	0	F	2	2	0	E N	